

PRODUCTS & SERVICES :

- 1<sup>ST</sup> CLASS IMPORTED WASHABLE VINYL WALL COVERINGS
- ABACA HAND-WOVEN WALL COVERINGS
- WALL COVERINGS ADHESIVE
- INSTALLATION, PEELING OF EXISTING WALL COVERINGS & WALL PREPARATION SERVICES
- PHOTO WALLS / MURALS
- HORIZONTAL & VERTICAL WINDOW BLINDS, COMBI BLINDS AND SUNSCREENS
- WALL TO WALL CARPET & CARPET TILES
- VIGAN TILES & BRICKS IN TERRACOTTA RED & ANTIQUE FINISH
- NATURAL & DECORATIVE STONES SLATES, NON-SKID TILES, ROCKS & PEBBLES
- OTHER INTERIOR AND EXTERIOR FINISHING MATERIALS

## WALLPAPER INSTALLATION INSTRUCTIONS

This Installation Instruction is also available for download at our website

<http://dmwallpaper.com/installation/dmwallpaperinstructions.pdf>

### PREPARE THE MATERIALS NEEDED PRIOR INSTALLATION



- *Inspect the Material, Design, Length, Width and Batch #*
- *Adhesive and Roller*
- *Measuring Tape*
- *Plumb Line (Hulog)*
- *Water Bucket/Pail*
- *Plastic Smoother/Scraper*
- *Cutter / Utility Knife*
- *Ladder*
- *Sponge*

### WALL PREPARATION



- *Remove Old Wallpaper*
  - *Wet the surface by using a wet sponge, wait for 10-20 minutes. Start peeling the wallpaper from the corner or seams.*
- *Walls must be painted with primer, if finishing paint is present, walls are ready.*
- *Acrylic Emulsion paint must be painted over the wall especially with Gypsum Boards.*
- *For best and professional results, clean the walls thoroughly and fill gaps/cracks/holes with putty.*

### PREPARE THE ADHESIVE



In a Water Bucket/Pail with 2 liters of water, pour half of the contents of the Adhesive pouch. Stir for half a minute until powder is fully dissolved. Set aside for 10-15 minutes.



## PRODUCTS & SERVICES :

- 1<sup>ST</sup> CLASS IMPORTED WASHABLE VINYL WALL COVERINGS
- ABACA HAND-WOVEN WALL COVERINGS
- WALL COVERINGS ADHESIVE
- INSTALLATION, PEELING OF EXISTING WALL COVERINGS & WALL PREPARATION SERVICES
- PHOTO WALLS / MURALS
- HORIZONTAL & VERTICAL WINDOW BLINDS, COMBI BLINDS AND SUNSCREENS
- WALL TO WALL CARPET & CARPET TILES
- VIGAN TILES & BRICKS IN TERRACOTTA RED & ANTIQUE FINISH
- NATURAL & DECORATIVE STONES SLATES, NON-SKID TILES, ROCKS & PEBBLES
- OTHER INTERIOR AND EXTERIOR FINISHING MATERIALS

## MARK THE WALL




- Mark a Vertical straight line using a Plumb Line (or locally knows as Hulog) from the corner, to ensure that subsequent panels will be straight.
- Measure the Width of the Wall, this would be required to compute how many panels are required.
- Measure the height of your Wall, this would be used to cut the length of the Material, provide ample allowance to follow the pattern/design.
  - e.g. The height of the Wall (from floor to ceiling) is 2.3 meters and width is 1.5meters.
  - Remove the Plastic of the Wallpaper
  - Lay the material on a clean floor, for the initial panel, measure 2.5 meters of the material and fold to mark the width.
  - With the use of sharp cutter/utility knife cut straight to the marked fold.
  - For the subsequent panels, follow the design/pattern, fold and cut. For the given width above, you will only be needing 3 panels.
- With the use of a clean Roller/Paint Brush, apply the adhesive evenly at the back of the Wallpaper.



PRODUCTS & SERVICES :

- 1<sup>ST</sup> CLASS IMPORTED WASHABLE VINYL WALL COVERINGS
- ABACA HAND-WOVEN WALL COVERINGS
- WALL COVERINGS ADHESIVE
- INSTALLATION, PEELING OF EXISTING WALL COVERINGS & WALL PREPARATION SERVICES
- PHOTO WALLS / MURALS
- HORIZONTAL & VERTICAL WINDOW BLINDS, COMBI BLINDS AND SUNSCREENS
- WALL TO WALL CARPET & CARPET TILES
- VIGAN TILES & BRICKS IN TERRACOTTA RED & ANTIQUE FINISH
- NATURAL & DECORATIVE STONES SLATES, NON-SKID TILES, ROCKS & PEBBLES
- OTHER INTERIOR AND EXTERIOR FINISHING MATERIALS

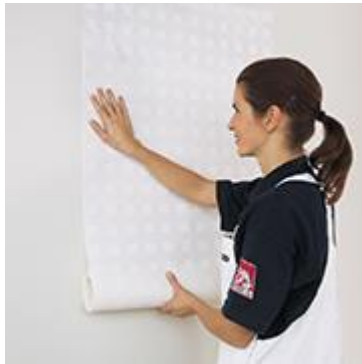

- *The first panel is to be hung is placed at ceiling, allow sufficient excess for trimming and using a Plastic Scraper, smooth out air bubbles or wrinkles; this motion would be from ceiling to lower area edges from left to right.*
- *Align the panels edge to edge to the wall and you may use a foam Rubber Roller or Plastic Scraper to smooth out any air bubbles and wrinkles.*
- *Remove excess wallpaper by using a Utility knife and plastic scraper.*
- *Remove excess paste on seams with a wet sponge.*